

# How to order Hydraulic Power Unit

TGT

Hydraulic Circuit

Code	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118
------	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

Motor Voltage

Code	D12	D24	A11	A22	A38
Voltage	DC12V	DC24V	AC110V	AC220V	AC380V

Motor Power

DC Motor		AC Motor	
Code	Power(KW)	Code	Power(KW)
01	0.5	01	0.75
02	0.8	02	1.1
03	1.6	03	1.5
04	2.0	04	2.2
05	2.5	05	3.0
06	3.0		

Solenoid Valve Voltage

Code	12	24	110	220
Voltage	DC12V	DC24V	AC110V	AC220V

Gear Pump: Group1.0 or Group0.5

Group 1.0 Code	A	B	C	D	E	F	G	H	I	J	K	L	M
Displacement (cc/r)	0.75	1.1	1.3	1.6	2.1	2.6	3.2	3.7	4.2	4.8	5.8	7	8
Group 0.5 Code	a	b	c	d	e	f	g	h	i	j	k	l	
Displacement (cc/r)	0.19	0.26	0.38	0.50	0.65	0.75	0.88	1.00	1.25	1.50	1.75	2.00	

Tank

Relief Valve Set

0~210bar

Mounting

Mounting	Horizontal	Vertical
Code	H	V

Oil Port

Code	A	B	C	D
Oil port	1/4 BSPP	3/8 BSPP	SAE6#	SAE8#

Remote Control Switch

YES	NO
-----	----

Special Requirement